

## DVD Codes

Denon.....	222,223,224,239
Fisher .....	236
Funai .....	225
General Electric .....	249,250
Goldstar .....	221
Hitachi .....	226
Kenwood.....	227,253
Magnavox .....	228,229,230,231,232,252
Mitsubishi .....	228,230,233,234
NAD .....	228
Onkyo .....	230
Panasonic .....	235,236,237,238,239,240,241,242
Philips .....	229,230,231
Pioneer .....	228,243,244
Proscan.....	246,249,250,251
Quasar .....	236
RCA.....	245,246,247,248,249,250,251
Radio Shack .....	225
Samsung.....	230
Sharp.....	253
Sony .....	215,216,217,218,219,220
Technics.....	236,237,240
Toshiba .....	230,243,252,253
Yamaha.....	239,254,255
Zenith	221, 230,252