

Codes pour lecteurs de DVD

Denon.....	222,223,224,239
Fisher	236
Funai	225
General Electric	249,250
Goldstar	221
Hitachi	226
Kenwood.....	227,253
Magnavox	228,229,230,231,232,252
Mitsubishi	228,230,233,234
NAD	228
Onkyo	230
Panasonic	235,236,237,238,239,240,241,242
Philips	229,230,231
Pioneer	228,243,244
Proscan.....	246,249,250,251
Quasar	236
RCA	245,246,247,248,249,250,251
Radio Shack	225
Samsung.....	230
Sharp.....	253
Sony	215,216,217,218,219,220
Technics.....	236,237,240
Toshiba	230,243,252,253
Yamaha.....	239,254,255
Zenith	221, 230,252